




Creating a Custom Prism Offset in GeoMax X-PAD Ultimate

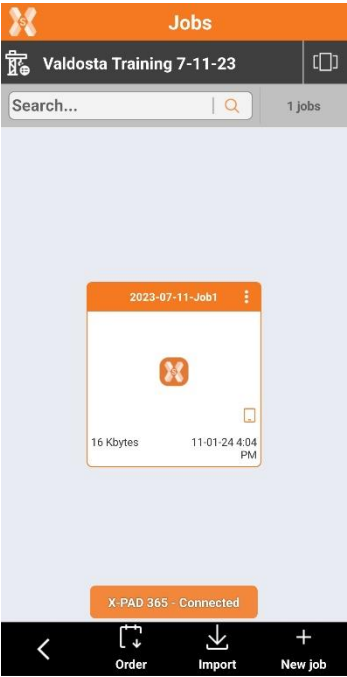


Opening a Job in X-PAD Ultimate

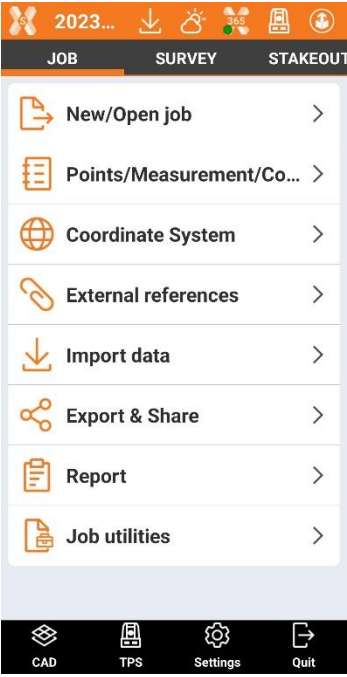


Select Settings

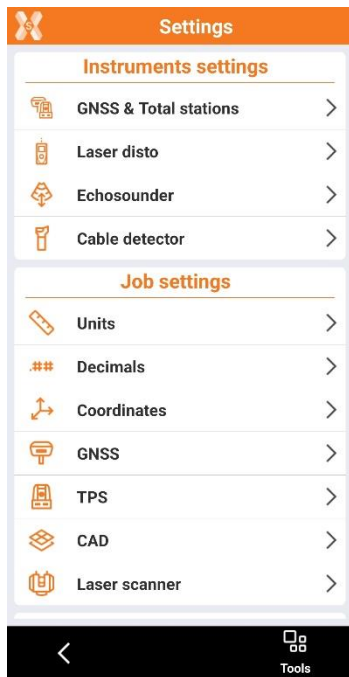


Select GNSS & Total Stations

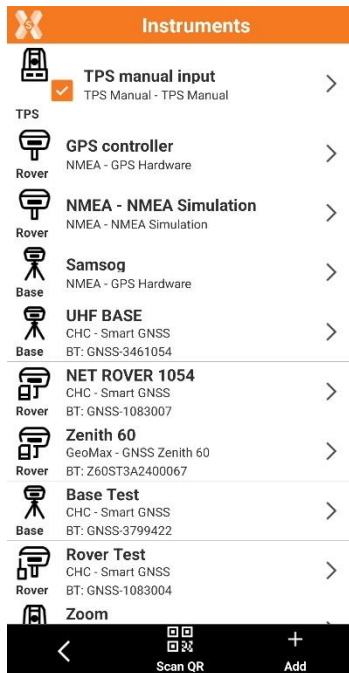

I use TPS Manual Input

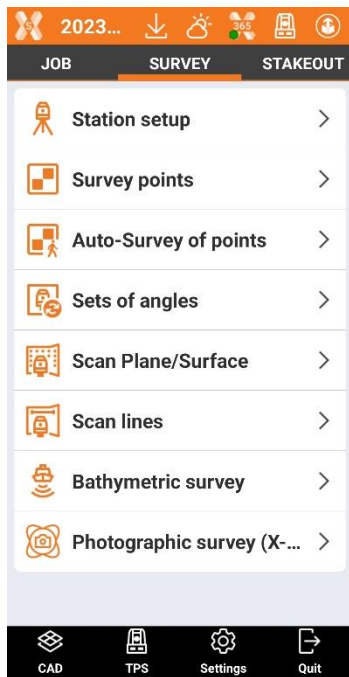

Select TPS on Bottom of Screen

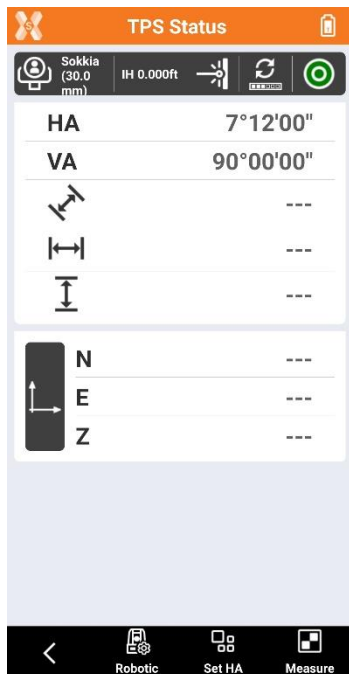

Select the Prism in the Top Left Corner


 **Select target**


Selecting Target Manager




 **Target manager**

Select Add

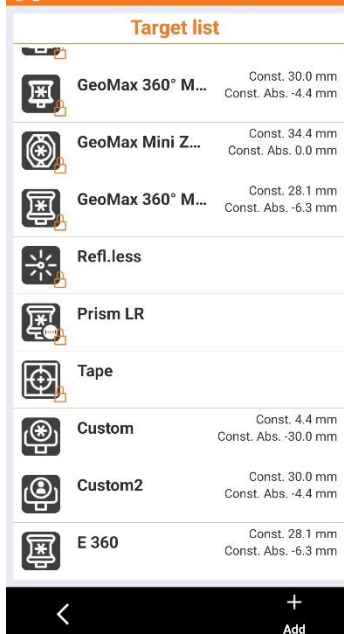

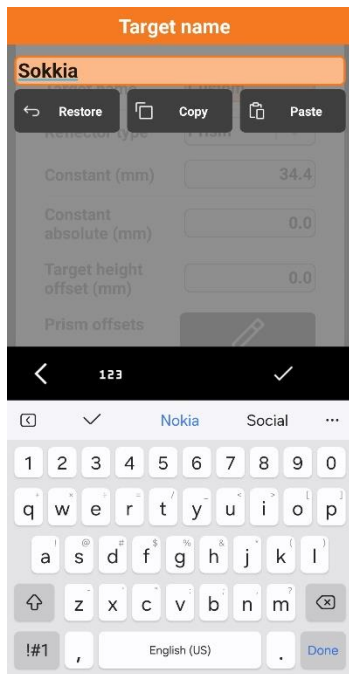

Choose a name for prism

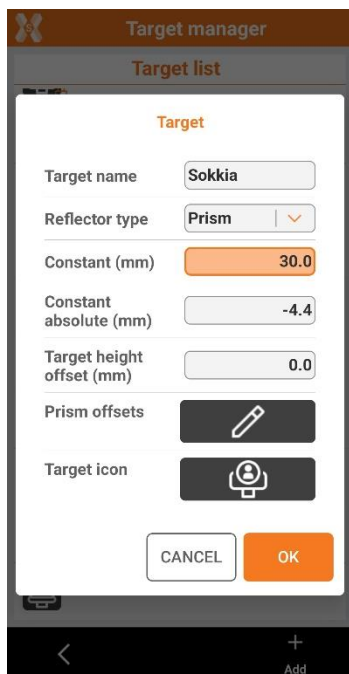


Enter your Prism Constant

Select Ok

 **Select target**



Select Customize and select the Target you wish to Replace

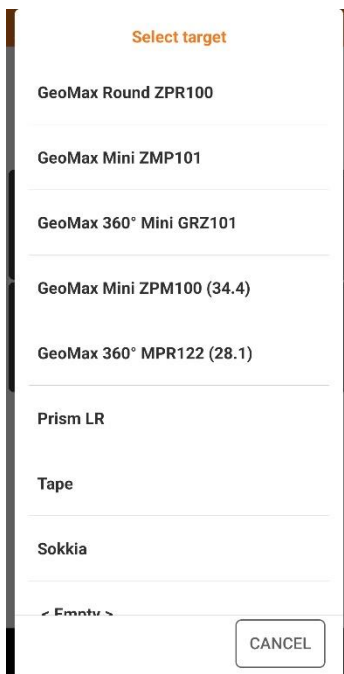

Choose your Prism from the List



You will now see your prism in the list of Favorites

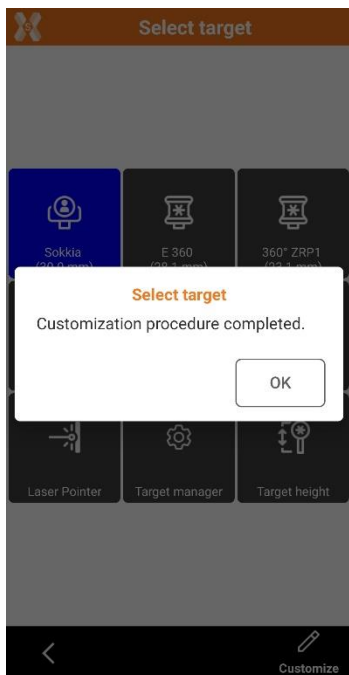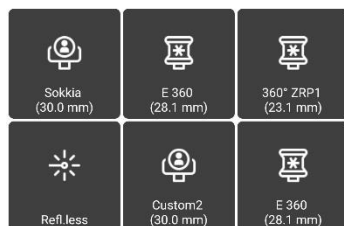

Select the Back Arrow

Select OK